



K18

ACTIVE SUBWOOFER SPEAKER

USER MANUAL

IMPORTANT INSTRUCTION

For your own safety please read this user manual carefully before installing the device.

SAFETY INTRODUCTION

*If this speaker has been exposed to significant temperature changes due to storage or transportation changes, do not switch it on immediately. Leave the speaker switched off until it has reached room temperature.

*It is essential that the device is earthed. A qualified person must carry out the electric connection.

*Make sure that the available voltage is not higher than stated at the end of this manual.

*Make sure the power cord is never crimped or damaged before and during use.

*Only handle the power cord by plug. Never pull out the plug by tugging the power cord.

*Turn off power before disconnecting electric.

CAUTION

1. Please be aware that damages caused by user modification, misuse, physical abuse or any unusual activities will void the warranty.
2. Use this speaker at safe listening volumes.

CAUTION GENERAL GUIDELINES


*Operate this speaker only after reading this user manual.

*Please use the original packaging if the device is to be transported.

*For safety reasons, do not remove any speaker components or rear panel.

OPERATION GUIDE

1. DSP Set (press to adjust DSP mode)
2. Polarity switch, adjusting phase
3. Volume Control
4. 2 CH XLR & 1/4" Combo Input
5. 2 CH XLR Output Switch
6. Power Switch on/off
7. AC Input

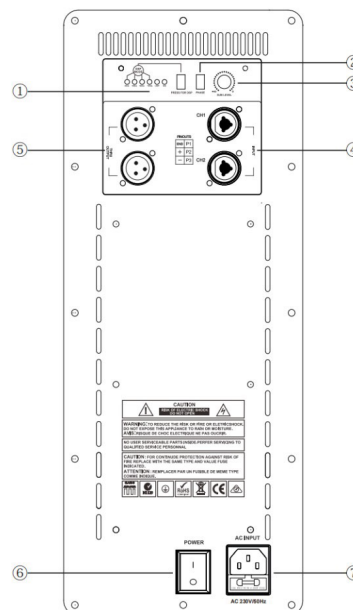

SPECIFICATIONS

Model	K18
Amplifier	Class D
Total Power	1100W RMS / 2200W PEAK
Frequency Response	35 Hz - 150 Hz
Line input	XLR & 6.35 mm. x 2
Output	XLR x 2
Max SPL	132 dB SPL
Material	MDF 18 mm. (Matte Finish, Black)
LF	18" cone, VC 4" 80OZ, Magnet : Ferrite
Shipping box / weight	565x725x705 mm. / 48.2 KG

